

INSTALLATION INSTRUCTIONS FABRIC WALL/PANEL MOUNT – MOUNT E

This mount is intended for fabric covered surfaces.

1. Position sign on panel with top front of sign tilting outward. This position enables pins to penetrate at proper angle.
2. After initial pin penetration, slide sign downward along face of wall/panel. Sign will “bottom out” 1-1/2” below original position.


On signs higher than 2”, “Flip out” pins from back of sign so that they set at about a 30 degree angle and mount as per instructions 1 and 2 above.

This mount is not recommended for signs over 100 square inches.

Signs over 12” in width require 2 pins for balance.

If there are any questions, please contact our Technical Support Department at 800.777.4310.

Typical Application:

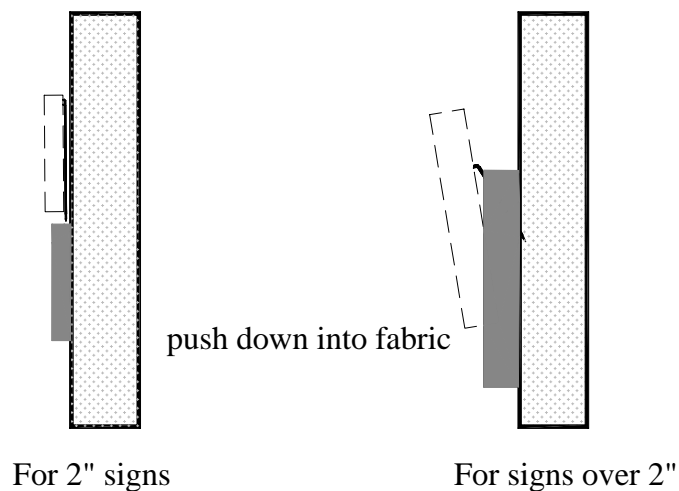

IMPORTANT: Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, hardware, and mounting instructions for each style of mount used. Surface of the sign must be handled with care. Clean with water and mild detergent.

Customer is responsible for suitability of each mounting option. Testing is recommended prior to each use.

Rev. 03/14/07