

# INSTALLATION INSTRUCTIONS PERPENDICULAR WALL MOUNT – MOUNT K

This mount is for mounting sign perpendicular to wall surface. Not recommended for signs wider than 15” unless the height of the sign is equal or greater than its width. All signs are sent with (2) toggles and (2) mounting screws - #6 x 1 ¼” Phillips flat head wood screws.

**For drywall installation:** Using mounting channel as a guide mark hole location, drill 5/16” diameter hole and insert toggle (squeeze flat and push into hole). Tap toggle flange flush to wall surface. Mount channel in place by screwing the # 6x1 ¼ Philips flat head screws through mount and into wall.

**For masonry installation:** Same as above except snap-off the outer wings of toggle before inserting into wall.

Once mount is attached to the wall remove inserts and end cap from the rail and simply align the rail with the mount and press into place until the locking tangs catch. Re-install the inserts and end caps.

## Typical Application:

Mounting Channel to Wall


Final Assembly

Dry Wall

Masonry


Rail Inserting to Channel

Mounted Sign

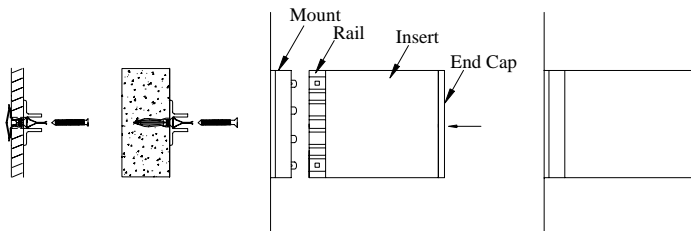

## Dismantle instructions for K-Mount

1. Take off end cap and inserts.
2. Using flat head screw driver or other suitable tool, slide between spring clip and rail to disengage locking tang from rail.
3. Gently pull rail away from mount.
4. Remove screws holding mount to wall with a Flat Head screwdriver.

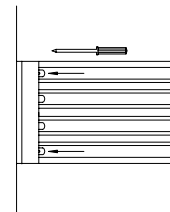

Note: Signs 2” and 3” in height will have 1 spring clip with 2 locking tangs located on the same side. Tang location will depend on installer application of mounting channel.  
Signs larger than 3” in height will have 2 spring clips with 1 locking tang per clip. Locking tang will always be located in the upper right and lower left of the spring clip in the mounting channel.  
If there are any questions, please contact our Technical Support Department at 800.777.4310.

**IMPORTANT:** Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, hardware, and mounting instructions for each style of mount used. Surface of the sign must be handled with care. Clean with water and mild detergent.

**Customer is responsible for suitability of each mounting option. Testing is recommended prior to each use.**

Rev. 03/14/07