

## INSTALLATION INSTRUCTIONS DIRECT TO CEILING MOUNT – MOUNT M


This mount is intended for applications requiring direct to ceiling positioning.

1. Install mounting bracket in desired location using 3/16” holes for anchor application (light signs up to 10”), or 7/16” holes for toggle applications (signs 12” and longer).
2. Remove either end cap from sign. Slide sign onto mounting bracket by inserting “T” bottom of mounting bracket into top slot of sign and slide sign into place. Replace the end cap.

Signs longer than 30” will require the mounting bracket to be in two pieces.

If there are any questions, please contact our Technical Support Department at 800.777.4310.

### Typical Application:

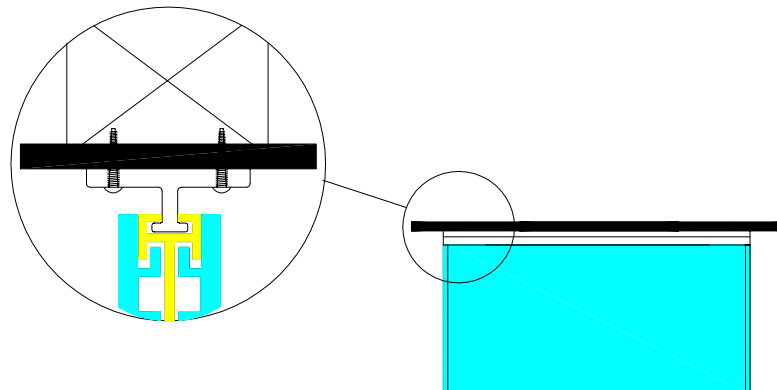

**IMPORTANT:** Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, and mounting instructions for each style of mount used. Mounting hardware is not included for this style mount. User shall determine the suitability of the product for intended use and the user assumes all risk and liability whatsoever in connection therewith. Surface of the sign must be handled with care. Clean with water and mild detergent.

**Customer is responsible for suitability of each mounting option. Testing is recommended prior to each use.**

Rev. 03/14/07