

## Installation Instructions

### Panel Mount - Under the Cap Fabric (O-Mount)

---

Applicable for the following: Arc, FlxSign, Slide (Thin and Standard Profiles), Plaques and PlaquesPlus.

This mount is intended for mounting standard and thin style signs onto panels with a top cap using fabric as a hook device. The mount is designed to fit under the top cap of the panel and places the top of the sign flush with the bottom of the top cap.

1. Remove the top cap from the office panel.
2. Set sign into place with the fabric in the channel. Position the sign flush with the top of the panel and. We recommend 2" from the edge of the panel.

 
Note: Your facility may set the signs at a different dimension from the edge of the panel. Remember to keep all signs in facility positioned on the panels the same way.

3. Remove liner from tape. (This will attach to the top cap when it is pressed into place.)
4. Replace the top cap.

This method is not recommended for panels over 66" high. Taller panels should use mounting methods A, B, C, or E.

If there are any questions, please contact our Technical Support Department at 800.777.4310.

Typical Applications:

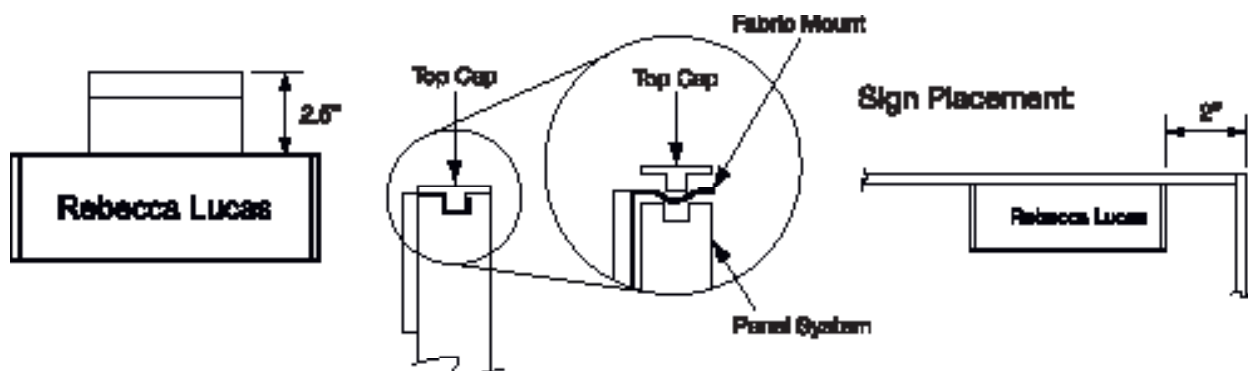

**IMPORTANT:** Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, hardware, and mounting instructions for each style of mount used. Surface of the sign must be handled with care. Bumpers are needed for proper function of end cap. Do not remove. Clean with water and mild detergent.

Customer is responsible for suitability of each mounting option. Testing is recommended prior to each use.

Rev. 1.2019