

This mount is intended for applications requiring direct to ceiling positioning.

1. Install mounting bracket in desired location using 3/16" holes for anchor application (for signs up to 10" wide), or 7/16" holes for toggle applications (for signs wider than 10").


Note: Due to a wide variety of mounting surfaces the attachment method to such surfaces is to be determined by the installer.

2. Remove either end cap from sign. Locking end caps will require a #1 Phillips head screw driver to remove end cap. Slide sign onto mounting bracket by inserting the "T" bottom of the mounting bracket into the top slot of sign and slide sign into position. Replace the end cap.

Note: Mounting hardware is not included. Signs longer than 90" will require the mounting bracket to be in two pieces.

If there are any questions, please contact our Technical Support Department at 800.777.4310.

## **Typical Applications:**

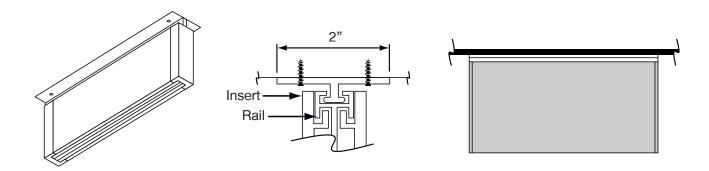

IMPORTANT: Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, hardware, and mounting instructions for each style of mount used. Surface of the sign must be handled with care. Clean with water and mild detergent.

Customer is responsible for suitability of each mounting option. Testing is recommended prior to each use.

Rev. 1.2019