


This mount is intended for wall mounting on surfaces such as drywall, wood, plaster, brick or other rough and /or repairable materials.

1. Remove either end cap from sign. Locking end caps will require a lock pin or screw driver to remove end cap, depending on thin or standard sign. Slide out copy insert(s) exposing mounting holes. (Check back of sign for hole locations).
2. Using the sign as a template, mark the location of the holes with a pencil. Drill 3/16" holes in the wall at the marked location. Install anchor.
3. Attach sign to wall with #6x1 5/8 Flat Head Screws provided.
4. Replace copy insert(s) and end cap.

**Note:** It is very important to install signs with hardware provided by 2/90 Sign Systems. The screw head must be below rail front for inserts to function properly. (See Figure A).

If you have any questions regarding installation, please contact our Technical Support Department at 800/777-4310.

Typical Application:

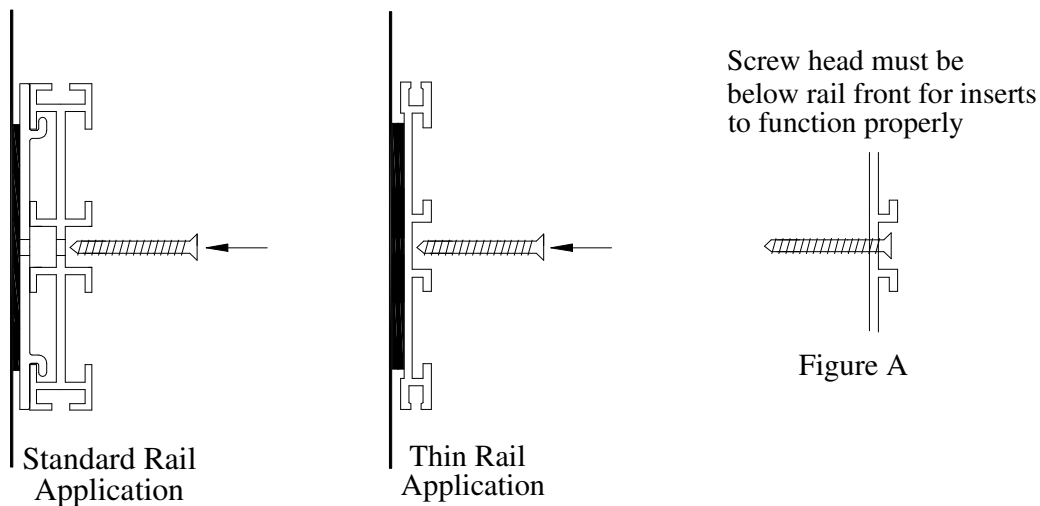

Note: Bumpers are needed for proper function of end cap.

**IMPORTANT:** Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, hardware, and mounting instructions for each style of mount used. Surface of the sign must be handled with care. Clean with water and mild detergent.

CUSTOMER IS RESPONSIBLE FOR SUITABILITY OF EACH MOUNTING OPTION.  
TESTING IS RECOMMENDED PRIOR TO EACH USE.