

Modular Installation Instructions

Wall Mount - Perpendicular (K-Mount)

This mount is intended for mounting sign perpendicular to wall surface. Not recommended for signs wider than 15". All signs are sent with (2) toggles and (2) mounting #6 x 1 5/8" trim screws.


For drywall installation: Using mounting channel as a guide to mark hole location, drill 5/16" diameter hole and insert toggle (squeeze flat and push into hole). Tap toggle flange flush to wall surface. Mount channel in place by screwing the #6 x 1 5/8" trim screws through mount and into wall.

For masonry installation: Same as above except snap-off the outer wings of toggle before inserting into wall.

Once mount is attached to the wall remove inserts and end cap from the rail. Locking end cap will require a #1 Phillips head screw driver to remove end cap. Join the rail and the mount together. Press rail into place until the locking tangs catch in the fabricated rectangular holes in the rail. Re-install the insert(s) and end cap.

If there are any questions, please contact our Technical Support Department at 800.777.4310.

Typical Applications:

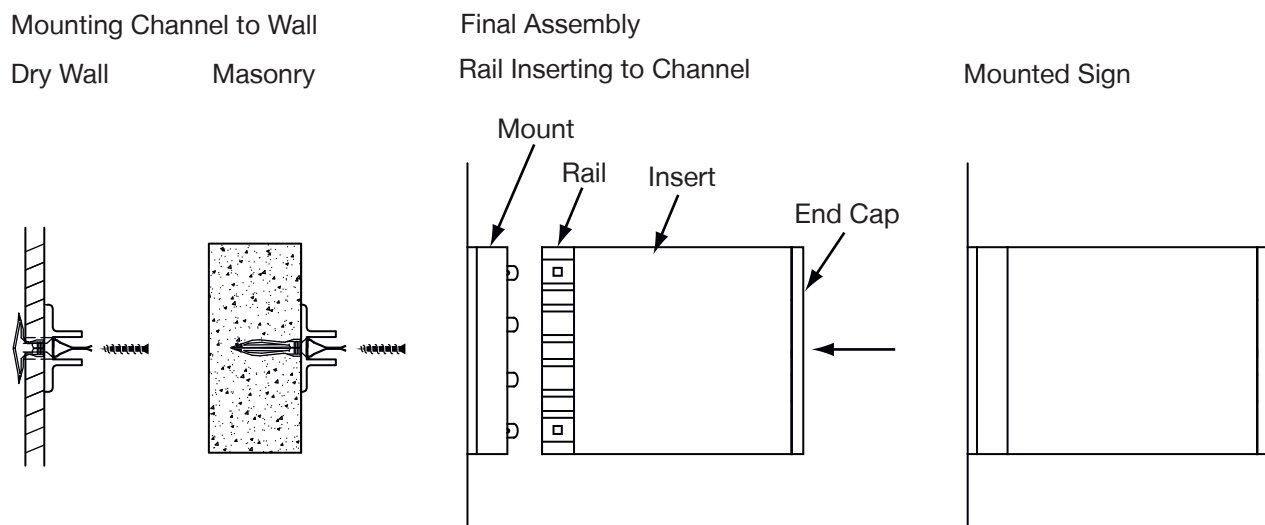

IMPORTANT: Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, hardware, and mounting instructions for each style of mount used. Surface of the sign must be handled with care. Clean with water and mild detergent.

Customer is responsible for suitability of each mounting option. Testing is recommended prior to each use.