

## INSTALLATION INSTRUCTIONS UNDER THE CAP MOUNT – MOUNT P




This mount is recommended for 2/90 Modular Standard, Thin or Arc Signs onto panels with a top cap using an aluminum bracket as a hook device. The mounts are designed to fit under the top cap of the panel and place the top of the sign flush with the bottom of the top cap.

1. Remove the top cap from the office panel.
2. Set sign, with the mounting bracket attached, into place.
3. Replace the top cap.

This method is not recommended for panels over 66” high. Taller panels should use mounting methods A, B, C, D, or E.

If there are any questions, please contact our Technical Support Department at 800.777.4310.

### Typical Application:

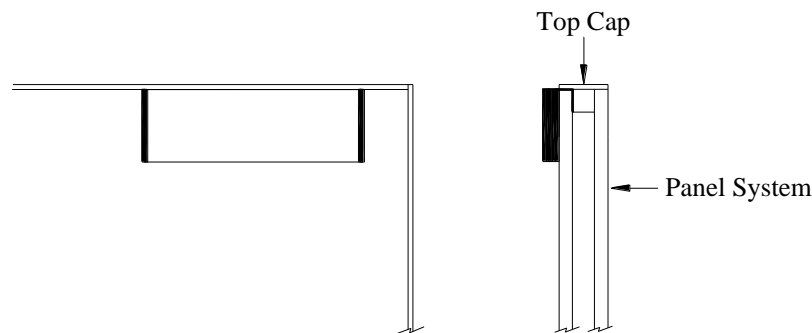

**IMPORTANT:** Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, hardware, and mounting instructions for each style of mount used. Surface of the sign must be handled with care. Clean with water and mild detergent.

**Customer is responsible for suitability of each mounting option. Testing is recommended prior to each use.**

Rev. 08/31/10