

## SafeCare Installation Instructions

### Wall Mount - Screw (D-Mount)


This mount is intended for wall mounting on surfaces such as drywall, wood, plaster, brick or other rough and/or repairable surfaces using silastic or polyurethane construction adhesive and Tamper resistant pin-in head torx screws.

1. Using sign as template – mark the location of the holes with a pencil.
2. Drill 3/16” holes in the wall at the marked location.
3. Install Anchors provided.
4. Apply adhesive liberally to back of sign per example. 2/90 recommends Loctite Power Grab Clear Construction Adhesive (not supplied by 2/90).
5. Attach sign to wall with #8 x 1.25 Countersunk Tamper Resistant Pin-In Head Torx screw. Use bit TR15 Torx.
6. Wipe any excess adhesive from around sign before it dries.

Note: It is very important to install signs with the hardware provided by 2/90 Sign Systems.

If there are any questions regarding installation, please contact our Technical Support Department at 800.777.4310.

Typical Applications:

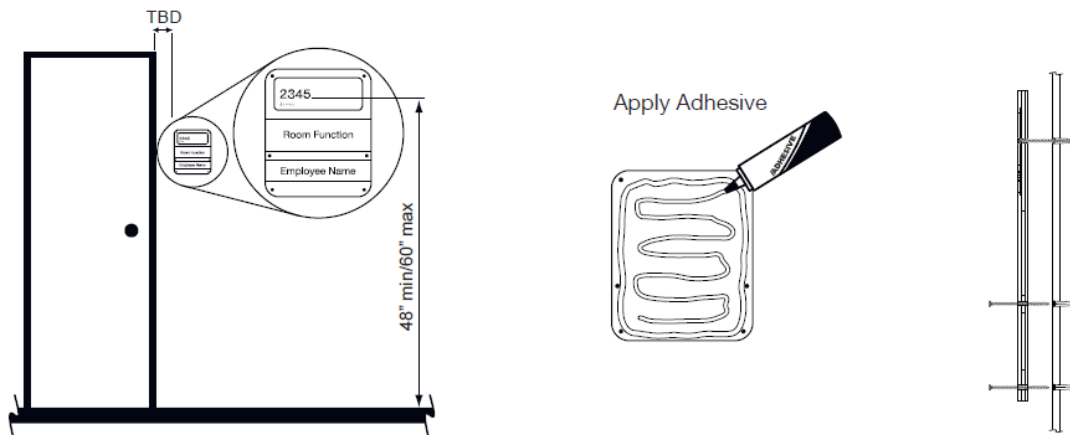

**IMPORTANT:** Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, hardware, and mounting instructions for each style of mount used. Surface of the sign must be handled with care. Clean with water and mild detergent.

Customer is responsible for suitability of each mounting option. Testing is recommended prior to each use.

12.2018